



KEYPAD FUNCTIONS AND DISPLAY ICONS



SETTINGS KEY **DO NOT ADJUST**



MODE KEY **DO NOT ADJUST**



JET 1 KEY WHICH
CONTROLS PUMP 1



JET 2 KEY WHICH
CONTROLS PUMP 2



JET 3 KEY WHICH
CONTROLS PUMP 3



TEMPERATURE UP
KEY



TEMPERATURE
DOWN KEY



SELECT KEY



LIGHT KEY WHICH
CONTROLS THE
LIGHTING

PUMP 1 FUNCTION

Press this pad gently to activate the pump

1st press – low speed (**icon rotates slow**)

2nd press – high speed (**icon rotates fast**)

3rd press – turns off



PUMP AUTOMATIC TIME-OUT

High speed – 15 minutes

Low speed – 30 minutes

PUMP 2 & 3 FUNCTION

Press these pads to activate the pumps

1st press – high speed (**icon rotates fast**)

2nd press – turns off



PUMP AUTOMATIC TIME-OUT

High speed – 15 minutes

LIGHT FUNCTION



Press this pad gently to activate the light

1st press – turns on

2nd press – turns off

LIGHT AUTOMATIC TIME-OUT

Time out – 60 minutes

ALTHOUGH THERE ARE AUTOMATIC TIME-OUTS, PLEASE TURN THE PUMPS OFF WHEN NOT IN USE AND REPLACE THE HOT TUB COVER USING THE LIFTER HANDLES.

IN CASE OF URGENTS PROBLEMS, PLEASE CONTACT YORKSHIRE HOTTUBS ON 01943 968 221